


NFORTEC
ANTARES
INSTRUCTION MANUAL

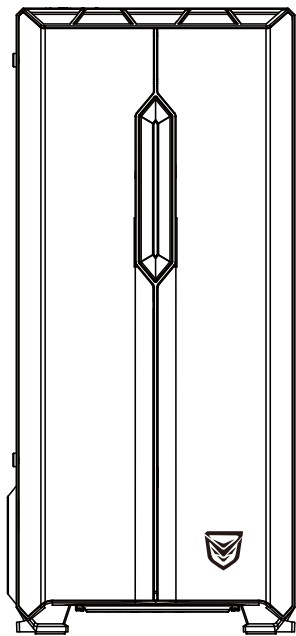

- A: Disassemble the side panel and the front panel.
- B: Install the power supply.
- C: Install the motherboard.
- D: Install fan and radiator.
- E: Install HDD.
- F: Install SSD.
- G: Install VGA card and disassemble the expansion slot.
- H: RGB lighting control

Accessory bag



H Control box Wiring

Power: 4pin port (connecting power 4pin port) Fan1-8: 6pin port (connecting in sequence from 1 to 8) Light strip: 3pin port

Fan1-8: 6pin port (connecting in sequence from 1 to 8) Control: 2pin port (Connecting to Reset button to change color) Programmable RGB pin: 3pin port (Connecting to motherboard 5V RGB port)

Only compatible with SYNC in ASUS

Remote control

Start button Mode control + LED speed control

Fan speed control LED HOLD LED SPEED Rainbow mode

LED pause/continue MODE MODE - Breathing mode

Star night mode MB SYNC Motherboard SYNC

Lightning mode R G B Blue

Motherboard SYNC Red Green

RF Wireless Remote controller

More information at: www.nfortec.com

