




CENTAURUS


RGB CPU AIR COOLER

QUICK GUIDE


COMPONENTS

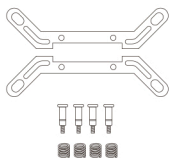


115X buckle and screws

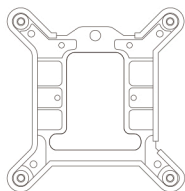

115X platform

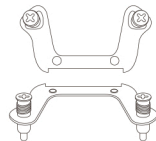

AMD buckle and screws

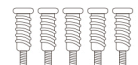

2011 buckle screws



buckle screws
and thermal paste




CENTAURUS

RGB CPU AIR COOLER


FOR INTEL PLATFORM

LGA2066/2011/1156/1155/1151/1150

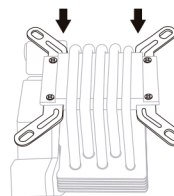


STEP 1

Install INTEL buckle on the base of the radiator, and fix them to the sides of the radiator base with four screws.

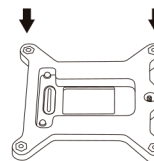

STEP 2

Lock the INTEL-specific backplane on the back of the CPU board at the back of the motherboard. (LAG2011 not required)

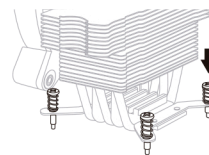


STEP 3

Use four 115X special long screws to insert the spring through the buckle to the back plate. (LGA2011 uses 2011 special screws)


FOR AMD PLATFORM

AM4/AM3+/AM3/AM2+/AM2/FM2+/FM2/FM1

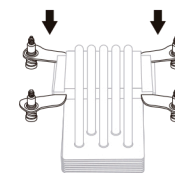


STEP 1

Install the AMD buckle on the radiator base and lock the sides of the radiator base with four screws.

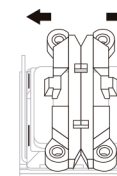

STEP 2

Remove the standard AMD buckle on the motherboard.

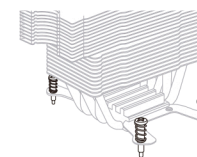

STEP 3

Align the hole to lock the radiator.



WARNING!

Verify the correct connection.

For more information please visit www.nfortec.com

